



Assembly Instructions for CANFORD CONNECT CC6AP/CC6ABP CAT6A SOCKET

①

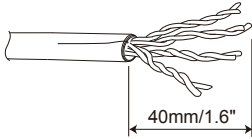


Strip off 40mm/1.6" of cable jacket. Fold back the earth wire.

②

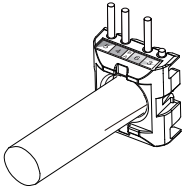


Choose the termination cap with the correct colour code (see below). Insert cable into the cap and fan out all four twisted pairs. Following the colour code, carefully position conductors into the slots.

③

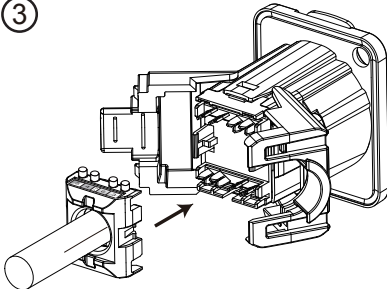


Follow the direction instruction on termination cap and place the termination cap onto the socket properly.

④

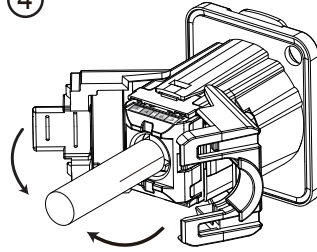

Close the housing firmly, ensuring good connection between earth wire and housing.

⑤

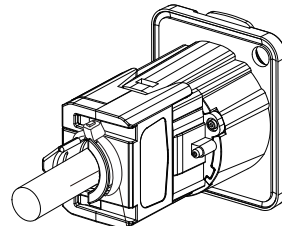

Cable Tie

Fasten the cable tie to secure the cable in the socket.

JACK PIN DESIGNATIONS	TIA / EIA T568A	TIA / EIA T568B
	1	White/Green
2	Green	Orange
3	White/Orange	White/Green
6	Orange	Green
4	Blue	
5	White/Blue	
7	White/Brown	
8	Brown	

